

MasterConsole MX⁴

Installation and Administrators Operation Guide

Model MX48

Model MX416

Model MX432

o 1
o e 1

o e

21

FCC Information

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential environment may cause harmful interference.

Product names mentioned in this document are trademarks or registered trademarks of their respective companies. MasterConsole MX⁴, MasterConsole II, MasterConsole, and their respective logos are registered trademarks of Raritan Computer, Inc. PS/2, RS/6000, and PC/AT are registered trademarks of International Business Machines Corporation. Mac is a registered trademark of Apple Computer Inc. Sun is a registered trademark of Sun Microsystems. Alpha is a registered trademark of Compaq Corporation. HP9000 is a registered trademark of Hewlett Packard. SGI is a registered trademark of Silicon Graphics, Inc.



Table of Contents

FCC INFORMATION	I
TABLE OF CONTENTS	II
TABLE OF FIGURES.....	IV
CHAPTER 1 GETTING STARTED.....	1
<i>Welcome</i>	<i>1</i>
<i>Introduction.....</i>	<i>1</i>
<i>Features</i>	<i>1</i>
<i>Quick Installation and Test</i>	<i>2</i>
<i>MX⁴ On-Screen User Interface.....</i>	<i>3</i>
CHAPTER 2 OPERATING THE MX⁴	4
<i>Logging In.....</i>	<i>4</i>
<i>Selecting a Computer</i>	<i>5</i>
<i>User Customization</i>	<i>7</i>
<i>On-Screen User Interface Functions.....</i>	<i>9</i>
CHAPTER 3 ADMINISTRATOR FUNCTIONS.....	11
<i>Administration Menu.....</i>	<i>11</i>
<i>System Configuration.....</i>	<i>11</i>
<i>User Configuration</i>	<i>14</i>
<i>Channel Configuration.....</i>	<i>15</i>
<i>Set Second-Tier Names.....</i>	<i>16</i>
CHAPTER 4 INSTALLING MX⁴	17
<i>Installations.....</i>	<i>17</i>
<i>One-Tier Installation.....</i>	<i>17</i>
<i>Two-Tier Installation.....</i>	<i>19</i>
<i>Connecting Second-Tier MasterConsole(s) to the Base Unit.....</i>	<i>20</i>
<i>Connecting a MasterConsole MX⁴ Unit for Second-Tier Operation:</i>	<i>20</i>
<i>Connecting a MasterConsole II C, X or S Unit for Second-Tier Operation</i>	<i>21</i>
<i>Connecting a MasterConsole P Model for Second-Tier Operation</i>	<i>22</i>
<i>Connecting Computers to Second-Tier MasterConsole(s).....</i>	<i>23</i>
<i>Channel Configuration for Two-Tier Installation.....</i>	<i>23</i>
APPENDIX A: SECURITY ACCESS AND PUBLICVIEW	26
<i>Security Access Mode.....</i>	<i>26</i>
<i>PublicView Video Sharing Options.....</i>	<i>26</i>
<i>PublicView (P-View) Action.....</i>	<i>27</i>
APPENDIX B: MX⁴ FRONT PANEL CONTROLS	28
<i>Front Panel Components and Functions.....</i>	<i>28</i>
<i>Start-Up Display</i>	<i>28</i>
<i>Normal Display</i>	<i>29</i>
<i>Function Selection Screen.....</i>	<i>29</i>
<i>Set LCD Contrast</i>	<i>30</i>
<i>Set Tier</i>	<i>30</i>
<i>Set Password.....</i>	<i>31</i>
<i>Disable Password.....</i>	<i>31</i>
<i>Logout</i>	<i>32</i>

<i>Select Sync Type</i>	32
<i>Reset MX⁴</i>	33
<i>Display Serial Number (DSP Serial Numbr)</i>	33
<i>Display Firmware Version (DSP Firmware Vsn)</i>	33
APPENDIX C: MCUPDATE PROGRAM	34
<i>Introduction</i>	34
<i>Installation</i>	34
<i>MCUpdate Operations</i>	35
<i>Attachments</i>	38
APPENDIX D: OVERVIEW PROGRAM	40
INTRODUCING OVERVIEW	40
INSTALLATION.....	40
OVERVIEW OPERATIONS.....	41
MC OVERVIEW FAQ'S	45
APPENDIX E: GLOSSARY	46
APPENDIX F: TROUBLESHOOTING	50
APPENDIX G: SPECIFICATIONS	52
<i>MX⁴ Models</i>	52
<i>Cable Kits</i>	52
<i>Universal Cable Kits: For connecting computer to MX⁴</i>	52
<i>User Console Cable: For connecting MX⁴ User Port to User Console</i>	52
<i>Cascading Cable: For connecting MX⁴ to tier to another MX⁴</i>	53
<i>Accessories</i>	53
APPENDIX H: MX⁴ CONFIGURATIONS	54
<i>Basic: 4 Users and Up to 16 Computers</i>	54
<i>4 Users and Up to 64 Computers Matrix</i>	55
<i>MX⁴ 4 Users and Up to 256 Computers Matrix</i>	56

Table of Figures

FIGURE 1 OSUI MENU STRUCTURE	3
FIGURE 2 LOG-IN MENU	4
FIGURE 3 SELECTION MENU	5
FIGURE 4 SELECTION MENU BY NAME	5
FIGURE 5 PUBLICVIEW ONLY MESSAGE	7
FIGURE 6 PUBLICVIEW SIGN ON	7
FIGURE 7 PUBLICVIEW SIGN OFF	7
FIGURE 8 USER PROFILE MENU	8
FIGURE 9 HELP MENU	10
FIGURE 10 ADMINISTRATION MENU.....	11
FIGURE 11 SYSTEM CONFIGURATION MENU	12
FIGURE 12 PUBLICVIEW MESSAGES.....	13
FIGURE 13 CONTINUOUS SYNC CONFIGURATION	13
FIGURE 14 USER CONFIGURATION MENU.....	14
FIGURE 15 CHANNEL CONFIGURATION MENU.....	15
FIGURE 16 ONE-TIER CONFIGURATION	17
FIGURE 17 ONE-TIER INSTALLATION CABLING DETAILS	18
FIGURE 18 MX ⁴ BACK PANEL	18
FIGURE 19 K/B MOUSE ADAPTERS FOR PS/2 TO AT.....	19
FIGURE 20 TWO-TIER CONFIGURATION	20
FIGURE 21 TWO-TIER INSTALLATION CABLING DETAILS.....	22
FIGURE 22 DEVICE CONFIGURATION MENU 1	24
FIGURE 23 DEVICE CONFIGURATION MENU 2	25
FIGURE 24 DEVICE CONFIGURATION MENU 3	25
FIGURE 25 MX ⁴ FRONT PANEL.....	28
FIGURE 26 MX ⁴ FRONT PANEL BUTTONS.....	28
FIGURE 27 LCD NORMAL DISPLAY	29
FIGURE 28 FUNCTION SELECTION	30
FIGURE 29 SET LCD CONTRAST	30
FIGURE 30 SET TIER	30
FIGURE 31 SET FRONT PANEL PASSWORD.....	31
FIGURE 32 DISABLE FRONT PANEL PASSWORD.....	32
FIGURE 33 LOGOUT	32
FIGURE 34 SELECT SYNC TYPE	33
FIGURE 35 DISPLAY SERIAL NUMBER	33
FIGURE 36 DISPLAY FIRMWARE VERSION	33
FIGURE 37 MX ⁴ BACK PANEL AND ADMIN PORT	34
FIGURE 38 RUNNING MCUPDATE PROGRAM	36
FIGURE 39 FILE OPTIONS SECTION	36
FIGURE 40 COMMUNICATION SECTION	36
FIGURE 41 UPDATE COMMANDS SECTION.....	37
FIGURE 42 MX4 BACK PANEL SHOWING RJ11 ADMIN PORT.....	40
FIGURE 43 OVERVIEW STARTED.....	41
FIGURE 44 COMMUNICATION CONTROL PANEL.....	41
FIGURE 45 LOGIN TO DATABASE.....	42
FIGURE 46 LOG WINDOW	43
FIGURE 47 EDIT USER PROFILE	43
FIGURE 48 EDIT DEVICE PROFILE.....	44
FIGURE 49 MX ⁴ BASIC CONFIGURATION.....	54
FIGURE 50 MX ⁴ 4x64 CONFIGURATION	55
FIGURE 51 MX ⁴ 4x256 MATRIX CONFIGURATION	56